

Always there to help you  
Register your product and get support at  
www.philips.com/welcome



HD3134  
Мультиварка  
Мультипісрігш  
Мультиварка




EN User manual  
RU Руководство пользователя  
UK Посібник користувача

PHILIPS



Specifications are subject to change without notice  
© 2014 Koninklijke Philips N.V.  
All rights reserved.

HD3134\_UM\_RU\_V2.0\_141125

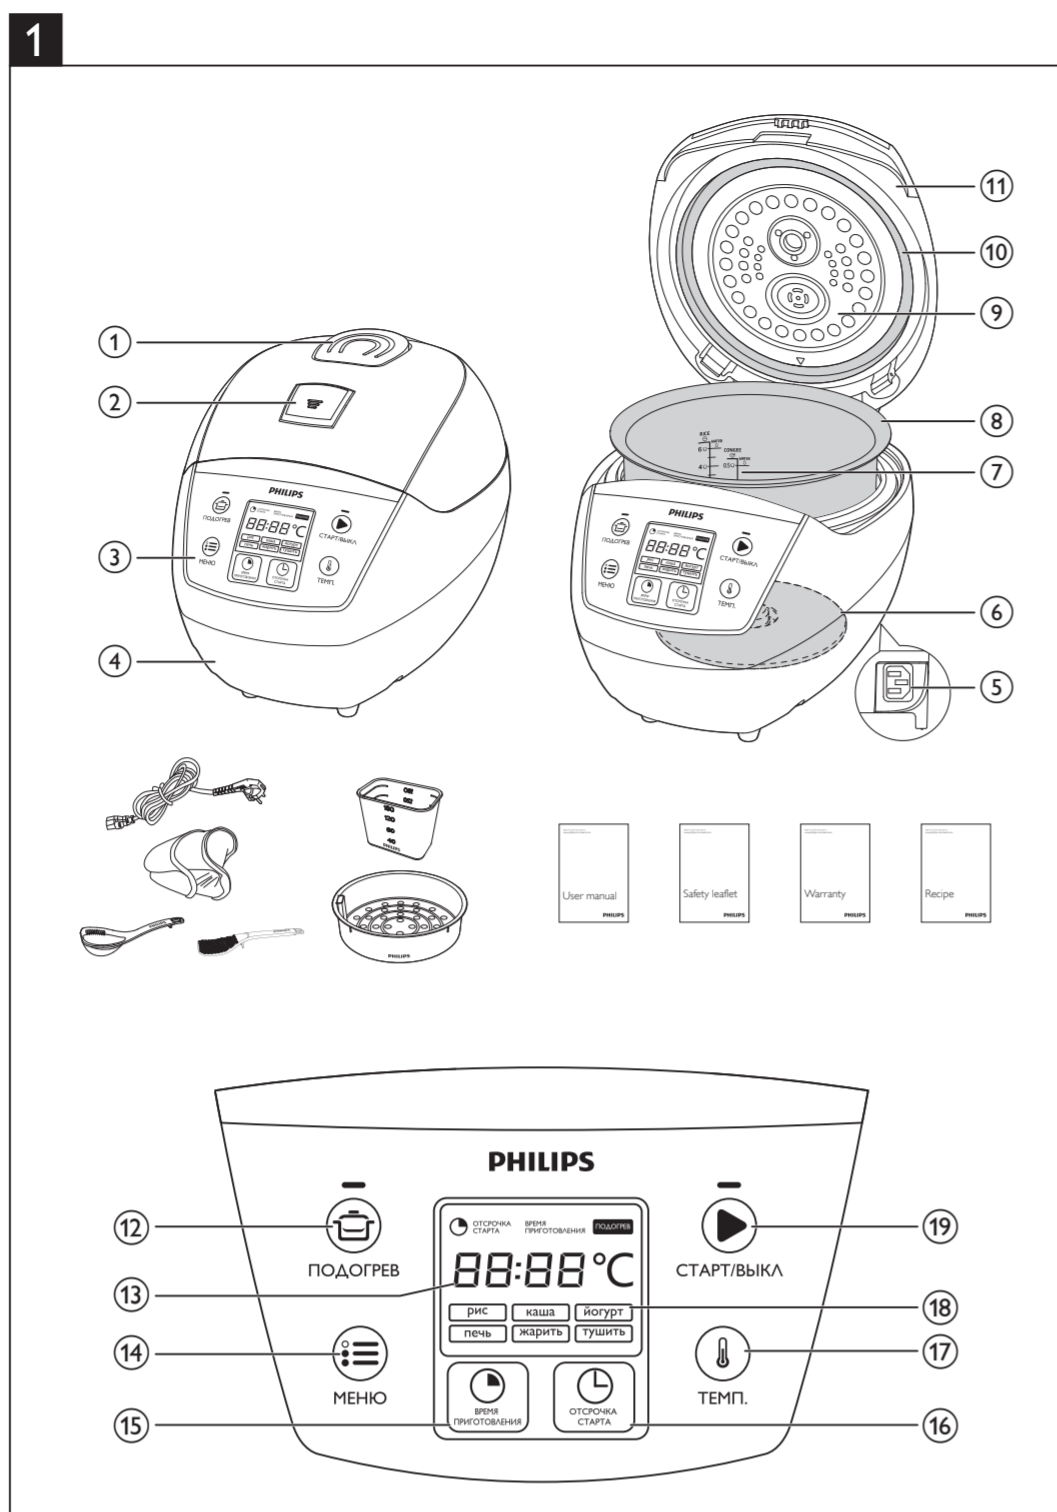

## English

### 1 Your multi-cooker

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 2 What's in the box (fig.1)

Multi-cooker main unit  
Rice scoop  
Silicon gloves  
User manual  
Recipe

Steamer  
Soup ladle  
Measuring cup  
Safety leaflet  
Warranty card

### 3 Overview

1 Detachable steam vent cap	7 Water level indications
2 Lid release button	8 Inner pot
3 Control panel	9 Detachable inner lid
4 Main body	10 Sealing ring
5 Power socket	11 Top lid
6 Heating element	

### Controls overview

10 Keep-warm button	16 Preset button
11 Display	17 Temperature button
12 Menu button	18 Cooking functions
13 Cooking time button	19 Start/Off button

### Functions overview

Functions	Default cooking time	Adjustable cooking time	Preset time
Rice (рис)	30 - 40 Minutes	/	1 - 24 Hours
Congee (каша)	10 Minutes	5 minutes - 2 hours	1 - 24 Hours
Fry (жарить)	15 Minutes	5 - 60 minutes	/
Stew (тушить)	1 hour	20 minutes - 10 hours	1 - 24 Hours
Bake (печь)	45 Minutes	20 - 120 minutes	1 - 24 hours
Yogurt (йогурт)	8 hours	6 - 12 hours	1 - 24 hours

### 4 Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the multi-cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

#### Note

- Make sure all parts are completely dry before you start using the multi-cooker.

### 5 Using the multi-cooker

#### Preparations before cooking (fig.2)

Before using the multi-cooker, you need to follow below preparations:

- Measure the rice using the measuring cup provided.
- Wash the rice thoroughly.
- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
- Press the lid release button to open the lid.
- Wipe the outside of the inner pot dry, then put the inner pot in the multi-cooker. Check if the inner pot is in proper contact with the heating element.
- Close the lid of the multi-cooker, and put the plug in the power socket.

#### Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. 1 cup of rice is approximately 180ml.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference.
- Make sure that the outside of the inner pot is clean and dry, and that there is no foreign residue on the heating element or the magnetic switch.

#### Rice cooking (fig.3)

- Follow the steps in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the rice cooking function (Рис) is selected.
- Press the start button (СТАРТ/ВЫКЛ) to start cooking.
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically.
- Keep-warm (ПОДОГРЕВ) is indicated on the display.

#### Note

- After the cooking has started, you can press the start/off button (СТАРТ/ВЫКЛ) to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 30 to 40 minutes, and is not adjustable.

#### Cooking congee (fig.4)

- Follow the steps in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the congee function (каша) is selected.
- To set a different cooking time, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) repeatedly to set the hour unit.
- Once the hour unit is set, wait for a few seconds before the multi-cooker automatically confirms the hour unit, and the minute unit starts flashing on the display.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) repeatedly to set the minute unit.
- After the cooking time is set, press the start button (СТАРТ/ВЫКЛ) to start cooking.
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically.
- Keep-warm (ПОДОГРЕВ) is indicated on the display.

#### Note

- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the multi-cooker to overflow. It is normal to find the congee stickier if it is left in keep-warm mode for too long.
- If the voltage is unstable at the area you live, it is possible that the multi-cooker overflows.
- After the cooking has started, you can press the start/off button (СТАРТ/ВЫКЛ) to deactivate the cooking process, and the multi-cooker will be in standby mode.
- In congee mode, the cooking time only starts counting down when the water starts boiling.
- The default cooking time is 10 minutes. You can select the cooking time between 5 minutes to 2 hours.

#### Making yogurt (fig.5)

- Whisk the ingredients for the yogurt well and put them in a glass container.
- Put the glass container in the inner pot. Make sure that the container is sealed.
- Pour some water in the inner pot. Make sure that half of the container is immersed in water.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the yogurt function (йогурт) is selected.
- To set a different cooking time, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) repeatedly to set the hour unit.
- Once the hour unit is set, wait for a few seconds before the multi-cooker automatically confirms the hour unit, and the minute unit starts flashing on the display.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) repeatedly to set the minute unit.
- After the cooking time is set, press the start button (СТАРТ/ВЫКЛ) to start cooking.
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multi-cooker will be in standby mode automatically.

#### Note

- After the cooking has started, you can press the start/off button (СТАРТ/ВЫКЛ) to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 8 hours. You can select the cooking time between 6 to 12 hours.

#### Baking (fig.6)

- Put the food and ingredients in the inner pot.
- Follow step 6 in "Preparations before cooking".
- Put the plug in the power socket.

#### Note

- When baking cake, keep the lid closed during cooking. Baking cake at 130°C and by 45 minutes usually delivers best cooking result.
- When baking food other than cake, the lid must be opened during cooking.

#### Note

- When baking cake, keep the lid closed during cooking. Baking cake at 130°C and by 45 minutes usually delivers best cooking result.
  - When baking food other than cake, the lid must be opened during cooking.
- Press the menu button (МЕНЮ) until the baking function (печь) is selected.
  - The default cooking time starts flashing on the display.
  - To set a different cooking temperature, press the temperature button (ТЕМП.), and the default cooking temperature starts flashing on the display.
  - Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) repeatedly to select the cooking temperature.

